

### Weather Station

models 00484 / 00506 / 00524



### CONTENTS

Unpacking Instructions .....	2	Placement Guidelines .....	8
Package Contents .....	2	Using the Weather Station .....	9
Product Registration .....	2	Programmable Alarms .....	10
Features & Benefits: Sensor .....	2	Troubleshooting .....	11
Features & Benefits: Display .....	3	Care & Maintenance .....	12
Setup .....	5	Calibration .....	12
Sensor Setup .....	5	Specifications .....	14
Display Setup .....	6	FCC Information .....	14
Set the Time, Date & Units .....	7	Customer Support .....	15
Backlight Settings .....	7	Warranty .....	15

**Questions?** Contact Customer Support at (877) 221-1252 or visit [www.AcuRite.com](http://www.AcuRite.com).

**SAVE THIS MANUAL FOR FUTURE REFERENCE.**

# ACURITE®

Congratulations on your new AcuRite product. To ensure the best possible product performance, please read this manual in its entirety and retain it for future reference.

## Unpacking Instructions

Remove the protective film that is applied to the LCD screen prior to using this product. Locate the tab and peel off to remove.

## Package Contents

1. Display
2. Outdoor Sensor
3. Power Adapter
4. Instruction Manual

## IMPORTANT

PRODUCT MUST BE REGISTERED  
TO RECEIVE WARRANTY SERVICE

### PRODUCT REGISTRATION

Register online to receive 1 year warranty protection

[www.AcuRite.com](http://www.AcuRite.com)

## Features & Benefits



## OUTDOOR SENSOR

- 1. Integrated Hanger**  
For easy placement.
- 2. Wireless Signal Indicator**  
Flashes when data is being sent to the display.
- 3. Battery Compartment Cover**


# Features & Benefits



## FRONT OF DISPLAY

- 1. Sensor Low Battery Indicator**
- 2. Outdoor Sensor Signal Strength**
- 3. Current Outdoor Temperature**  
Arrow icon indicates the direction temperature is trending.
- 4. Outdoor Low Temperature Record**  
Lowest temperature recorded since midnight.
- 5. Outdoor High Temperature Record**  
Highest temperature recorded since midnight.
- 6. Icon**  
Indicates display is in auto-dimming brightness mode (see page 7).
- 7. Alarm ON/OFF Indicator**
- 8. Date**
- 9. Display Low Battery Indicator**
- 10. Clock**
- 11. Current Indoor Temperature**  
Arrow icon indicates the direction temperature is trending.
- 12. Humidity Level Indicator**  
Indicates a high, low or ideal humidity comfort level.
- 13. Current Indoor Humidity**  
Arrow icon indicates the direction humidity is trending.
- 14. Current Barometric Pressure**  
Arrow icon indicates the direction pressure is trending.
- 15. 12 to 24 Hour Weather Forecast**  
Self-Calibrating Forecasting pulls data from the outdoor sensor to generate your personal forecast.
- 16. Backlight Button**  
For momentary backlight and dimmer settings.

# Features & Benefits

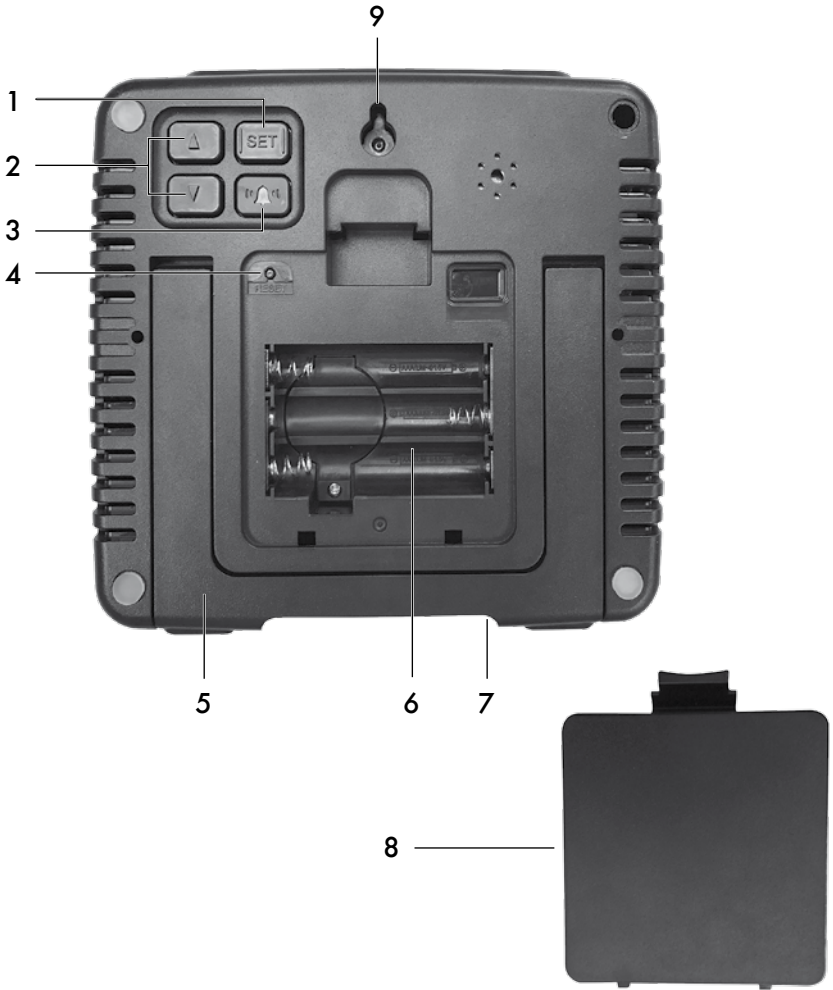

## BACK OF DISPLAY

- 1. SET Button**  
For setup preferences.
- 2. ▲ & ▼ Buttons**  
For setup preferences.
- 3. (🔔) Button**  
For alarm setup.
- 4. RESET Button**  
Full reset to factory defaults.
- 5. Foldout Tabletop Stand**
- 6. Battery Compartment**
- 7. Plug-in for Power Adapter**
- 8. Battery Compartment Cover**
- 9. Integrated Hang Hole**  
For easy wall mounting.
- 10. Power Adapter**  
(not shown)

## Sensor Setup

### Install or Replace Batteries

AcuRite recommends high quality alkaline or lithium batteries in the outdoor sensor for the best product performance. Heavy duty or rechargeable batteries are not recommended.

The sensor requires lithium batteries in low temperature conditions. Cold temperatures can cause alkaline batteries to function improperly. Use lithium batteries in the sensor for temperatures below  $-4^{\circ}\text{F}$  /  $-20^{\circ}\text{C}$ .

1. Slide off the battery compartment cover.
2. Insert 2 x AA batteries into the battery compartment, as shown. Follow the polarity (+/-) diagram in the battery compartment.
3. Replace the battery cover.



**LITHIUM BATTERIES**  **$-40^{\circ}\text{F}$**  ( $-40^{\circ}\text{C}$ )  **$158^{\circ}\text{F}$**  ( $70^{\circ}\text{C}$ )

**ALKALINE BATTERIES**  **$-4^{\circ}\text{F}$**  ( $-20^{\circ}\text{C}$ )  **$158^{\circ}\text{F}$**  ( $70^{\circ}\text{C}$ )

# Display Setup

## 1 Install or Replace Backup Batteries (optional)

AcuRite recommends high quality alkaline batteries in the display for the best product performance. Heavy duty or rechargeable batteries are not recommended.

1. Remove the battery compartment cover.

2. Insert 3 x AAA alkaline batteries into the battery compartment, as shown. Follow the polarity (+/-) diagram in the battery compartment.

3. Replace the battery cover.

## 2 Plug in Power Adapter

For the best performance, plug in the power adapter as the main power source for this product.



## 1 Install Backup Batteries (optional) 3 AAA batteries



## 2 Plug in Power Adapter



**IMPORTANT:** Batteries are a backup power source to preserve records in the event of a power outage. **Power adapter is recommended as the primary power source to enjoy the full functionality of this product.**



**PLEASE DISPOSE OF OLD OR DEFECTIVE BATTERIES IN AN ENVIRONMENTALLY SAFE WAY AND IN ACCORDANCE WITH YOUR LOCAL LAWS AND REGULATIONS.**

**BATTERY SAFETY:** Clean the battery contacts and also those of the device prior to battery installation. Remove batteries from equipment that will not be used for an extended period of time. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the device. Dispose of used batteries properly. Only batteries of the same or equivalent type as recommended are to be used. DO NOT incinerate used batteries. DO NOT dispose of batteries in fire, as batteries may explode or leak. DO NOT mix old and new batteries or types of batteries (alkaline/standard). DO NOT use rechargeable batteries. DO NOT recharge non-rechargeable batteries. DO NOT short-circuit the supply terminals.

## Set the Time, Date & Units

Press and release the SET button to enter SETUP MODE. Once in setup mode, the preference you are currently setting will blink on the display.

To adjust the currently selected (flashing) item, press and release the "▲" or "▼" buttons (press and HOLD to fast adjust).

To save your adjustments, press and release the SET button again to adjust the next preference. The preference set order is as follows:

CLOCK HOUR  
CLOCK MINUTE  
CALENDAR MONTH  
CALENDAR DATE  
CALENDAR YEAR  
TEMPERATURE UNITS (°F or °C)  
BAROMETRIC PRESSURE UNITS (inHg or hPa)

You will automatically exit SETUP MODE if no buttons are pressed for 8 seconds. Enter setup mode at any time by pressing the SET button.

## Display Backlight Settings

This weather station's color display features three different lighting settings: High (100%) brightness, Medium (60%) brightness and Low (15%) brightness.

When display is powered with the power adapter, backlight remains on at 100% brightness. Press backlight button once to dim to 60% brightness; press again to dim to 15%, press a 3rd time to enter "AUTO DIM" mode.

<b>AUTO DIM MODE:</b> Automatically adjusts display brightness based on time of day.
6:00 a.m. - 9:00 p.m. = 100% brightness
9:01 p.m. - 5:59 a.m. = 15% brightness

## Placement for Maximum Accuracy

AcuRite sensors are sensitive to surrounding environmental conditions. Proper placement of both the display and outdoor sensor are critical to the accuracy and performance of this product.



### Display Placement

Place the display in a dry area free of dirt and dust. Display stands upright for tabletop use or is wall-mountable.

### Outdoor Sensor Placement


Sensor must be placed outside to observe outdoor conditions. Sensor is water resistant and is designed for general outdoor use, however, to extend its life place the sensor in an area protected from direct weather elements.

Hang the sensor using the integrated hang holes or hanger, or by using string (not included) to hang it from a suitable location, like a well covered tree branch. The best location is 4 to 8 feet above the ground with permanent shade and plenty of fresh air to circulate around the sensor.



## Important Placement Guidelines

- To ensure accurate temperature measurement, place units out of direct sunlight and away from any heat sources or vents.
- Display and outdoor sensor must be within 165 ft (50 m) of each other.
- To maximize wireless range, place units away from large metallic items, thick walls, metal surfaces, or other objects that may limit wireless communication.
- To prevent wireless interference, place both units at least 3 ft (.9 m) away from electronic devices (TV, computer, microwave, radio, etc.).

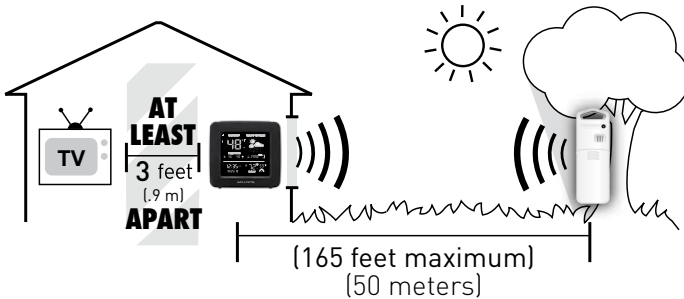

## Setup is Complete

The sensor will now synchronize with the display. It may take a few minutes for synchronization to complete. Please refer to the troubleshooting section of this manual if anything appears to be functioning improperly.




## Using the Weather Station Learning Mode

Self-Calibrating Forecasting uses a unique algorithm to analyze changes in pressure over a time period (called Learning Mode) to determine your altitude. After 14 days, the Learning Mode icon disappears from the display screen. At this point, the self-calibrated pressure is tuned in to your location and the unit is ready for superior weather prediction.

## Weather Forecast

AcuRite's patented Self-Calibrating Forecasting provides your personal forecast of weather conditions for the next 12 to 24 hours by collecting data from the sensor in your backyard. It generates a forecast with pinpoint accuracy - personalized for your exact location. Depending on your model, weather forecast icons will be displayed in one of the two versions shown below.

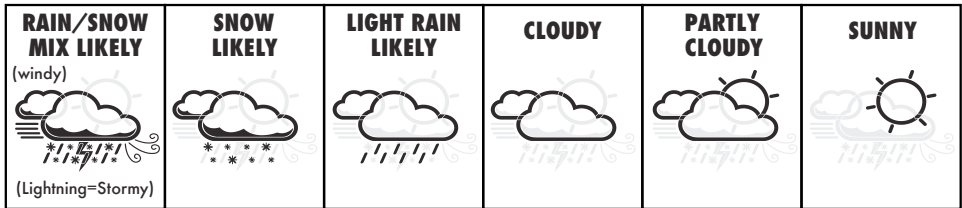

View the complete list of icons at [www.AcuRite.com/acurite-icons](http://www.AcuRite.com/acurite-icons)










 
## Barometric Pressure

Subtle variations in barometric pressure greatly affect the weather. This weather station displays the current pressure with an arrow icon to indicate the direction the pressure is trending (FALLING, STEADY, or RISING).


 

 


## Programmable Alarms


This display features programmable alarms that sound an alert to notify you when a value (for temperature or humidity) has been reached or exceeded. When an alarm is triggered, the display emits an audible beep and flashes data in the affected category. You can customize the alarms by turning ON or OFF the alarms you'd like activated or deactivated, and by inputting your own values to trigger the alarm.


### Setup an Alarm

1. Press and release the " " button until the reading for which you wish to set an alarm is shown on the display. " " will be shown.
2. Press and release the " " or " " buttons until " " appears.
3. Press and release the "SET" button. The current HIGH alarm value will be shown.
4. Press and release the " " or " " buttons to adjust the alarm's HIGH value.
5. Press and release the "SET" button. The current LOW alarm value will be shown.
6. Press and release the " " or " " buttons to adjust the alarm's LOW value.
7. Press and release the "SET" button to end alarm adjustments, OR press and release the " " button to adjust the next alarm's values.


### Disable an Alarm

1. Press and release the " " button until the reading for which you wish to disable an alarm is shown on the display. " " will be shown.
2. Press and release the " " or " " buttons until " " appears.
3. Press and release the " " button to cycle to the next reading.
4. Repeat steps 1-3, as needed.

**Note:** To disable ALL alarms at once, press and HOLD the " " button for 10 seconds.

You will automatically exit alarm SET MODE if no buttons are pressed for 10 seconds. Enter alarm SET MODE at any time by pressing the " " button.

# Troubleshooting

Problem	Possible Solution
<p><b>No outdoor sensor reception</b></p>  no bars	<p>If the wireless signal indicator shows no bars:</p> <ul style="list-style-type: none"> <li>• Relocate the display and/or the outdoor sensor. The units must be within 165 ft (50 m) of each other.</li> <li>• Make sure both units are placed at least 3 feet (.9 m) away from electronics that may interfere with the wireless communication (such as TVs, microwaves, computers, etc).</li> <li>• Use standard alkaline batteries (or lithium batteries in sensor when temperature is below -4°F/-20°C). Do not use heavy duty or rechargeable batteries. NOTE: It may take a few minutes for display and sensor to synchronize after batteries are replaced.</li> </ul>
<p><b>Display screen not working</b></p>	<ul style="list-style-type: none"> <li>• Check that the power adapter is plugged into the display and an electrical outlet.</li> </ul>
<p><b>Outdoor temperature is flashing or showing dashes</b></p>	<p>Flashing of the outdoor temperature is generally an indication of wireless interference.</p> <ol style="list-style-type: none"> <li>1. Bring both the sensor and display indoors, side by side and remove power adapter/batteries from each.</li> <li>2. Reinstall batteries in the outdoor sensor.</li> <li>3. Reinstall power adapter/batteries in display.</li> <li>4. Let the units sit within a couple feet of each other for a few minutes to gain a strong connection.</li> </ol>
<p><b>Inaccurate forecast</b></p>	<ul style="list-style-type: none"> <li>• Weather Forecast icon predicts conditions for the next 12 to 24 hours, not current conditions.</li> <li>• Has Learning Mode icon disappeared from the display? Learning Mode must complete before forecast and pressure will be accurate.</li> <li>• Allow unit to run continuously for 33 days. Battery removal or resetting the display will restart Learning Mode. After 14 days, forecast should be fairly accurate, however Learning Mode calibrates for a total of 33 days.</li> </ul>
<p><b>Inaccurate temperature or humidity</b></p>	<ul style="list-style-type: none"> <li>• Make sure both the display and sensor are placed out of direct sunlight and away from any heat sources or vents (see page 8).</li> <li>• Make sure the display is positioned away from moisture sources (see page 8).</li> </ul>

**If your AcuRite product does not operate properly after trying the troubleshooting steps, visit [www.AcuRite.com](http://www.AcuRite.com) or call (877) 221-1252 for assistance.**

## Care & Maintenance

### Display Care

Clean with a soft, damp cloth. Do not use caustic cleaners or abrasives. Keep away from dust, dirt and moisture. Clean ventilation ports regularly with a gentle puff of air.

### Outdoor Sensor Care

Clean with a soft damp cloth. Do not use caustic cleaners or abrasives.

## Calibration

### Calibrate Temperature & Humidity

The indoor temperature and humidity and outdoor temperature readings can be calibrated on the display to improve accuracy. Calibration can improve accuracy when sensor placement or environmental factors impact your data accuracy.

1. To access calibration mode, press AND HOLD the “▲”, “▼”, and “SET” buttons for at least 5 seconds.
2. Once in calibration mode, the preference you are currently setting will be highlighted on the display.
3. Press the “▲” or “▼” buttons to calibrate the data value higher or lower from the actual reading.
4. Press the “SET” button to confirm the calibration adjustment. The “م” icon will remain illuminated next to calibrated values.
5. The next adjustable data will begin flashing, indicating it is ready to be calibrated. Repeat Steps 1 - 4 to calibrate additional data.

The preference set order is as follows:

OUTDOOR TEMPERATURE

INDOOR TEMPERATURE

INDOOR HUMIDITY

BAROMETRIC PRESSURE (must be set to MANUAL mode; see page 12)

After 10 seconds of inactivity, the display will save the adjustments and exit calibration mode. Note: Calibrations will be erased if the display is reset or if batteries are removed and the power adapter is unplugged.

## Calibrate Barometric Pressure

The weather station default pressure mode is "AUTO". In auto mode, the pressure will calibrate itself over a 14 day Learning Mode. Barometric pressure can be manually calibrated:

1. Press AND HOLD the "SET" button (located on the back of the display) for at least 10 seconds to enter manual pressure mode.
2. The un-calibrated pressure will be displayed. Press AND HOLD the "▲", "▼", and "SET" buttons for at least 5 seconds.
3. Press and release the "SET" button three times to enter barometric pressure calibration mode.
4. Press the "▲" or "▼" buttons to calibrate the pressure higher or lower.
5. Press the "SET" button to confirm the calibration adjustment.  
Note: The "∞" icon will remain illuminated next to the calibrated value.

After 10 seconds of inactivity, the display will save your adjustments and exit calibration mode. Note: Calibration will be erased if the display is reset, set to auto pressure mode, or if the batteries are removed and power adapter is unplugged.

To exit manual pressure mode and return to auto pressure mode press and hold the "SET" button for at least 10 seconds.

# Specifications

<b>TEMPERATURE RANGE</b>	Outdoor: -40°F to 158°F; -40°C to 70°C
	Indoor: 32°F to 122°F; 0°C to 50°C
<b>HUMIDITY RANGE</b>	Indoor: 1% to 99% RH
<b>WIRELESS RANGE</b>	165 ft / 50 m depending on home construction materials
<b>OPERATING FREQUENCY</b>	433 MHz
<b>POWER</b>	Display: 5V power adapter 3 x AAA alkaline batteries (optional)
	Sensor: 2 x AA alkaline or lithium batteries
<b>DATA REPORTING</b>	Outdoor: 30 second updates
	Indoor: 60 second updates

# FCC Information

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions:

- 1- This device may NOT cause harmful interference, and
- 2- This device must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation of the device.

## Customer Support

AcuRite customer support is committed to providing you with best-in-class service. **For assistance**, please have the model number of this product available and contact us in any of the following ways:



(877) 221-1252

Visit us at [www.AcuRite.com](http://www.AcuRite.com)

- ▶ Installation Videos
- ▶ Register your Product
- ▶ Instruction Manuals
- ▶ Support User Forum
- ▶ Replacement Parts
- ▶ Submit Feedback & Ideas

# IMPORTANT

PRODUCT MUST BE REGISTERED  
TO RECEIVE WARRANTY SERVICE

## PRODUCT REGISTRATION

Register online to receive 1 year warranty protection

[www.AcuRite.com](http://www.AcuRite.com)

## Limited 1-Year Warranty

AcuRite is a wholly owned subsidiary of Chaney Instrument Company. For purchases of AcuRite products, AcuRite provides the benefits and services set forth herein. For purchases of Chaney products, Chaney provides the benefits and services set forth herein.

We warrant that all products we manufacture under this warranty are of good material and workmanship and, when properly installed and operated, will be free of defects for a period of one year from the date of purchase.

Any product which, under normal use and service, is proven to breach the warranty contained herein within ONE YEAR from date of sale will, upon examination by us, and at our sole option, be repaired or replaced by us. Transportation costs and charges for returned goods shall be paid for by the purchaser. We hereby disclaim all responsibility for such transportation costs and charges. This warranty will not be breached, and we will give no credit for products which have received normal wear and tear not affecting the functionality of the product, been damaged (including by acts of nature), tampered, abused, improperly installed, or repaired or altered by others than our authorized representatives.

Remedy for breach of this warranty is limited to repair or replacement of the defective item(s). If we determine that repair or replacement is not feasible, we may, at our option, refund the amount of the original purchase price.

**THE ABOVE-DESCRIBED WARRANTY IS THE SOLE WARRANTY FOR THE PRODUCTS AND IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. ALL OTHER WARRANTIES OTHER THAN THE EXPRESS WARRANTY SET FORTH HEREIN ARE HEREBY EXPRESSLY DISCLAIMED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.**

We expressly disclaim all liability for special, consequential, or incidental damages, whether arising in tort or by contract from any breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

We further disclaim liability from personal injury relating to our products to the extent permitted by law. By acceptance of any of our products, the purchaser assumes all liability for the consequences arising from their use or misuse. No person, firm or corporation is authorized to bind us to any other obligation or liability in connection with the sale of our products. Furthermore, no person, firm or corporation is authorized to modify or waive the terms of this warranty unless done in writing and signed by a duly authorized agent of ours.

In no case shall our liability for any claim relating to our products, your purchase or your use thereof, exceed the original purchase price paid for the product.

### Applicability of Policy

This Return, Refund, and Warranty Policy applies only to purchases made in the United States and Canada. For purchases made in a country other than the United States or Canada, please consult the policies applicable to the country in which you made your purchase.

Additionally, this Policy applies only to the original purchaser of our products. We cannot and do not offer any return, refund, or warranty services if you buy products used or from resale sites such as eBay or Craigslist.

### Governing Law

This Return, Refund, and Warranty Policy is governed by the laws of the United States and the State of Wisconsin. Any dispute relating to this Policy shall be brought exclusively in the federal or State courts having jurisdiction in Walworth County, Wisconsin; and purchaser consents to jurisdiction within the State of Wisconsin.

# ACU>RITE®



Weather  
Stations



Temperature  
& Humidity



Weather  
Alert Radio



Kitchen  
Thermometers  
& Timers



Clocks

*It's more than accurate, it's ACU>RITE.*

AcuRite offers an extensive assortment of precision instruments, designed to provide you with information you can depend on to Plan your day with confidence™.

[www.AcuRite.com](http://www.AcuRite.com)