

## **Clock/Thermometer**

### **DO NOT HANG IN DIRECT SUNLIGHT!**

For the most accurate temperature readings choose a location that will not be exposed to direct sunlight or other heat sources.

### **To Set Time:**

Turn the set knob on back of the clock movement in either direction.

### **To Start Clock:**

Clock requires one "AA" battery (not included). Insert one "AA" battery (not included) as indicated in the battery compartment.

### **Thermometer Calibration:**

The pointer may move during shipping, causing the thermometer to read temperature inaccurately. If the thermometer is reading incorrectly, compare the temperature reading to a known accurate thermometer. Let both thermometers adjust to room temperature for at least three hours. If the new thermometer continues to read inaccurately, adjust the pointer by turning knob on the back of the unit in the appropriate direction.

**Questions?** Contact Customer Support at  
(877) 221-1252 or visit [www.AcuRite.com](http://www.AcuRite.com).